


RINO, RINO-S, RINOi


Asennusohje

Montering / Installation / Инструкция по установке

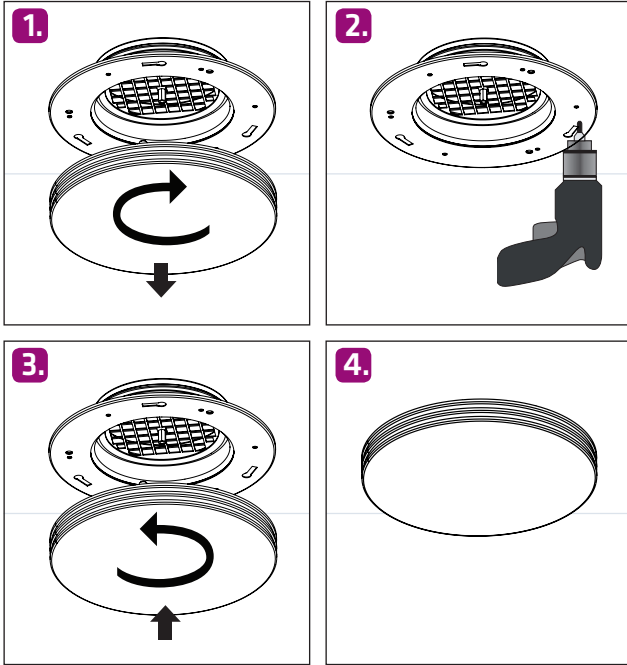


Huolto-ohje

Skötsel / Maintenance / Руководство по техническому

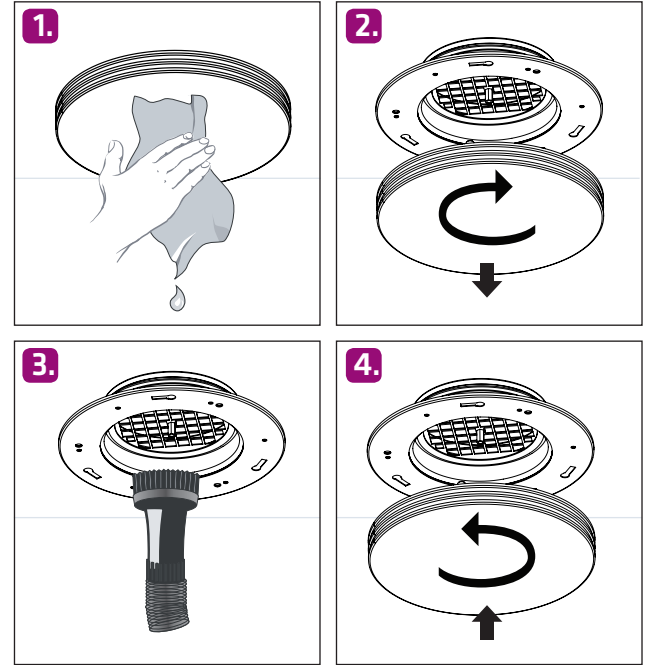

Säätöohje

Injustering / Adjustment / Инструкция по настройке

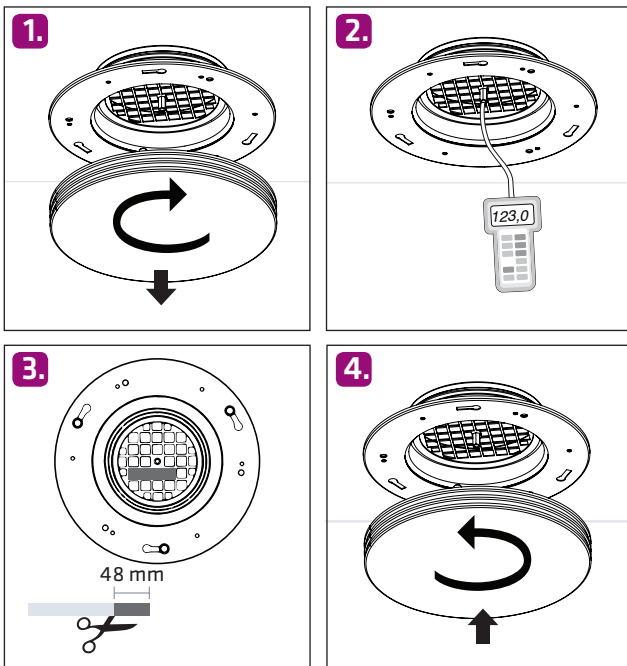

$q_v = k \times v \sqrt{\Delta P_m}$

	k					
	RINO					
	100	125	160	100-S	100i	125i
0	3,14	4,48	7,60	1,77	3,40	4,90
1	2,73	4,05	7,10	1,43	2,89	4,55
2	2,31	3,70	6,70	1,05	2,52	4,10
3	1,96	3,41	6,30		2,14	3,80
4	1,59	3,04	5,84		1,78	3,40
5	1,24	2,72	5,50		1,44	3,04
6		2,44	5,13			2,68
7		2,05	4,80			2,38
8		1,73	4,40			1,96
9			4,30			
10			3,80			
11			3,40			
12			3,10			
13			2,70			
14			2,40			
15			2,10			

Säätönauhaa kpl / Injusteringsband st / Adjustment tape pcs
(1 = 4 reikä / hål / holes = 48mm)

RINO, RINO-S, RINOi

Hajotuskuvion suuntaus

Spridningsmönster / Adjustment of the throw pattern / подача воздуха

